

1 Installation instructions

➤ Tools needed


- Cutter
- Hammer
- Hacksaw
- Silicone dispenser
- Silicone



➤ Select the outlet/inlet size fitting the tube to be connected. With a sharp cutter cut the plastic at the size selected.




➤ If needed, with the use of a hammer remove the parts of plastic in excess.

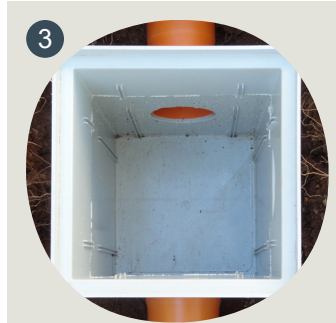

➤ Position the catch basin in the terrain selected and attach the inlet/outlet tubes to the catch basin.



➤ Cut one catch basin of same size using a hacksaw following lateral signs

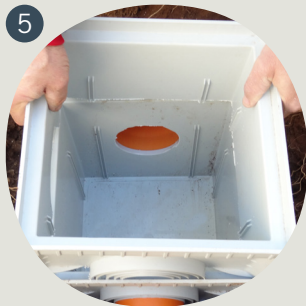

➤ Position the cut catch basin over the one already set in the terrain



➤ The catch basins and covers have to be positioned as shown in the picture



➤ Seal the connection of the two catch basins with silicone glue



➤ Seal the inlet/outlet tubes connection with silicone glue



➤ Position a proper size cover or grid over the catch basin and proceed with filling the lateral with terrain

Optional operations only in case tubes are too deep, and bigger height has to be obtained.

catch basin "top" and "super"